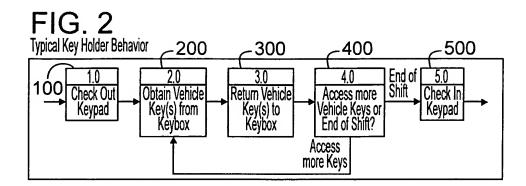


FIG. 1



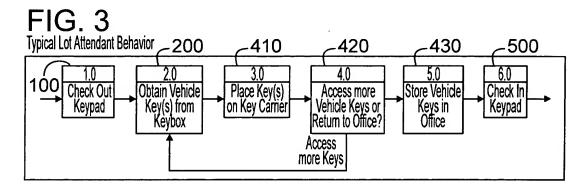


FIG. 4
Obtain Vehicle Key(s) from Keybox

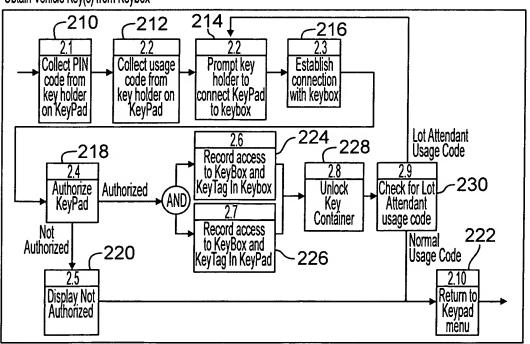
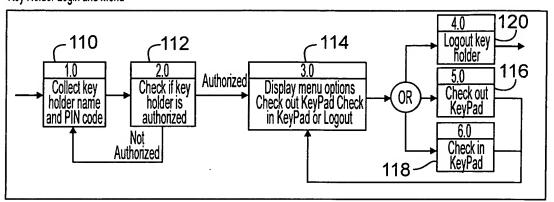
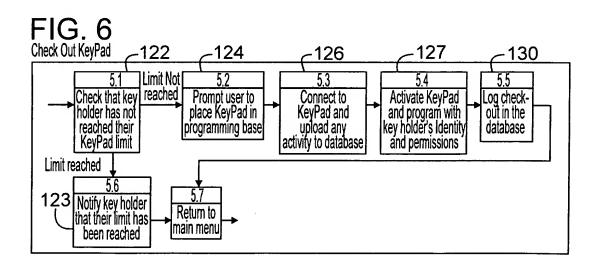


FIG. 5 Key Holder Login and Menu





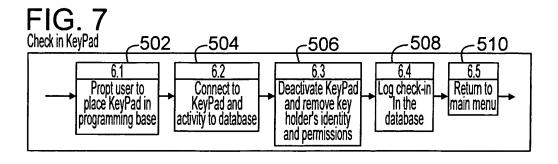
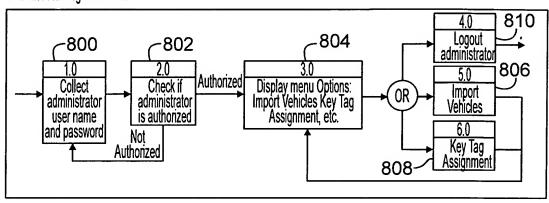


FIG. 8 Administrator Login and Menu



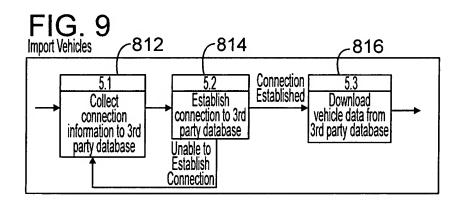
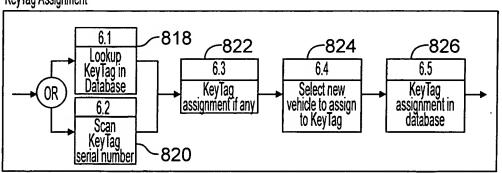
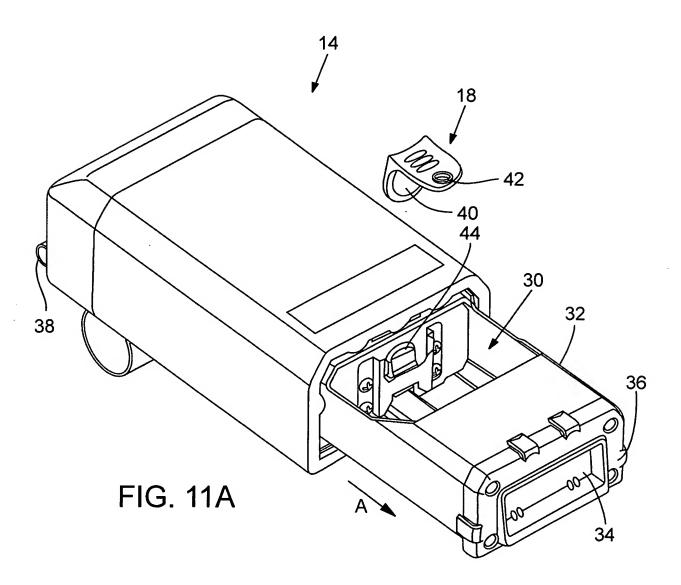
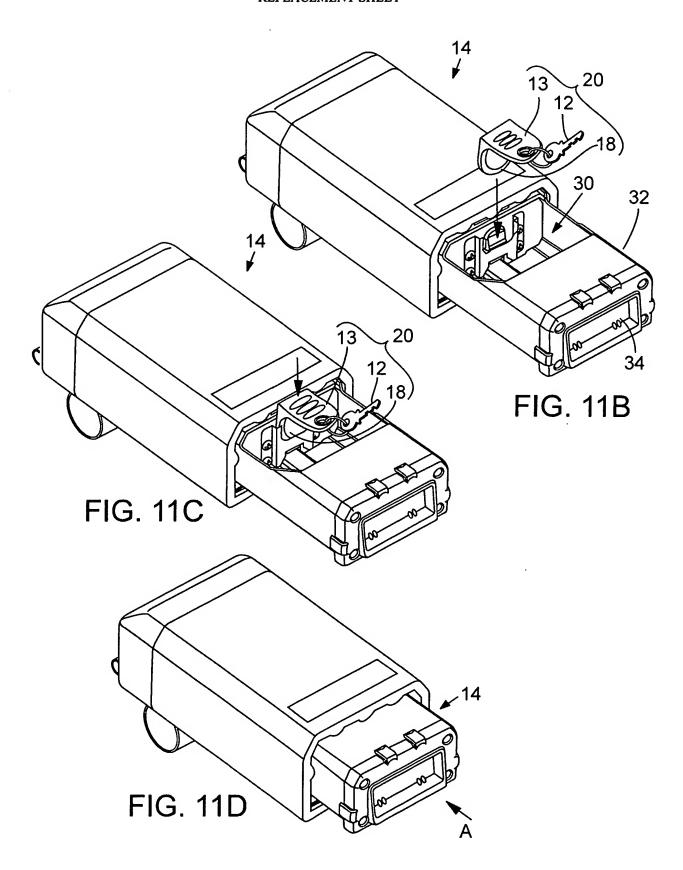


FIG. 10 KeyTag Assignment







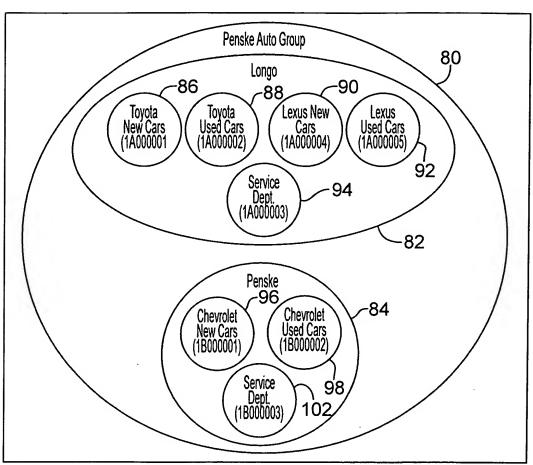


FIG. 12

## FIG. 13

Key Advantage User Configuration	
Name: <u>Nellie Frost</u> Type: <u>Local Administrator</u> Location: <u>Lot 2</u>	Login: <u>nellie</u> Password: <u>nest</u>
Access Availability (Check box to allow access)  System Code Name  Hide  AAAA	User Parameters ■ Edit Record information ■ Program devices ■ View Reports □ View screens only (no editing)

# FIG. 14

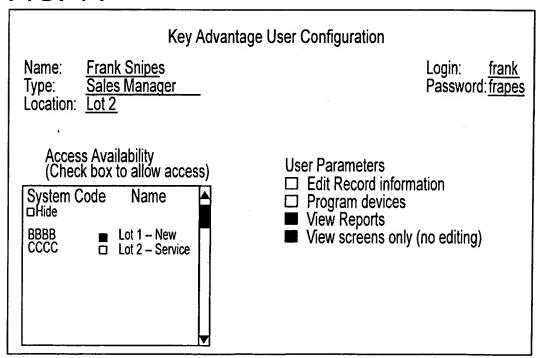


FIG. 15

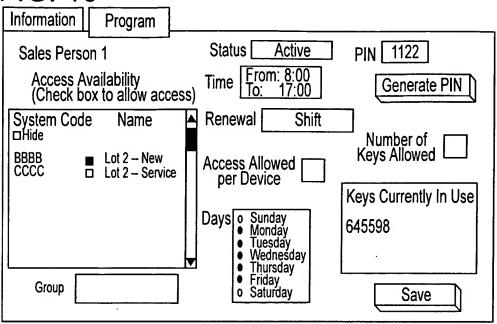


FIG. 16

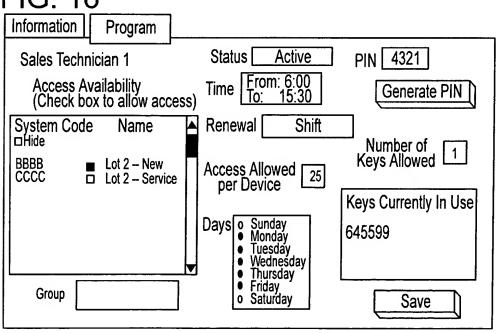


FIG. 17

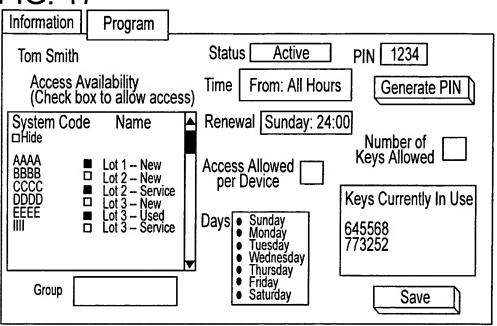


FIG. 18

